



Original instructions

DN00173 Issue 1 July 2023





Manufacturer:

Area Four Industries s.r.o.

Spindlerova 286

413 01 Roudnice nad Labem

Czech Republic

T +420 416 810 800

sales@prolyte.com

We have made every effort to ensure the accuracy of this manual. No liability will be accepted for errors. We reserve the right to change or alter our products or manuals without prior notice.

No part of this manual may be reproduced in any form or by any means without prior written permission.

If you have a warranty claim, malfunction or spare part inquiry, contact your point of sale or the manufacturer.

If you have comments or improvement ideas for this document, please contact us by using the e-mail address found on the back cover of the document. All comments and ideas will be carefully considered in the future development of the product or this document.



Contents

1	Intro	duction5
	1.1	About this product
	1.2	Related information5
	1.3	About this manual5
	1.4	Terminology6
	1.5	Standards
2	Safe	ty6
3	Limi	tations of use
	3.1	Allowable loading
	3.2	Structural data
4	Tran	sport, handling and storage7
5	Iden	tification7
6	Tech	nical specifications
7	Load	l capacity9
8	Арр	roved accessories10
9	Coat	ings and surface treatments
10	Sling	ing methods10
11	Asse	mbly and disassembly
12	Maiı	ntenance
13	Insp	ection10
14	Disc	ard criteria10
15	War	ranty
16	Cert	ificates10

Change history

Issue	Date	Changes
1	July 2023	First issue.



1 Introduction

This manual is intended for truss owners, providers and skilled riggers and any person who has been trained in working safely with trusses.

This manual is Part 2 of the User Manual. The User Manual consists of the following parts:

- Part 1: General instructions
- Part 2: Product-specific instructions

This manual must be read in conjunction with *Part 1: General instructions* of the User Manual.

If there are discrepancies between *Part 1* and *Part 2*, the information given in *Part 2* is the information that applies to the product and overrides the information given in *Part 1*.

This manual assumes that you have been trained or work under the control of a competent or qualified person who has been trained in safety and assembly.

1.1 About this product

PROLYTE trusses are structural elements designed to be repeatedly assembled and disassembled to carry loads in temporary or permanent installations. Depending on the application, PROLYTE trusses can be referred to as lifting accessories or construction products. For information on the related standards, see Chapter 1.5.

The S66 series can be used for indoor and outdoor structures.

1.2 Related information

For more information on the product, see <u>www.prolyte.com/products/aluminium-truss</u>.

1.3 About this manual

Before working with the product, read this manual carefully and pay attention to the information provided. Use this manual to familiarize yourself with the product, its proper use and safety regulations.

1.3.1 Safety conventions

1 DANGER

Indicates a hazardous situation, which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations.

Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates information considered important but not hazard-related.



1.4 Terminology

See PROLYTE Trusses User Manual, Part 1: General instructions.

Trusses and truss modules are hereinafter referred to by the term "truss".

1.5 Standards

See PROLYTE Trusses User Manual, Part 1: General instructions.

2 Safety

Before working with the product, see the section *Safety* in *Prolyte Trusses User Manual, Part 1: General instructions*. Read the Safety information carefully and pay attention to the information provided.

In addition to the Safety information provided in Part 1, make sure you read the Safety information provided in this product-specific user manual.

NOTICE

Read these safety texts carefully before working with the product.

NOTICE

Make sure manuals are available at all times for all users and employees.

3 Limitations of use

Make sure you read the information provided in section *Limitations of use* in *PROLYTE Trusses User Manual, Part 1: General instructions*.

Prolyte trusses described in this manual are not specifically designed for lifting people. Adequate load reduction and safety precautions, according to local legislation, must be considered when people are lifted.

3.1 Allowable loading

For load capacity information, see Chapter 7.

3.2 Structural data

All our trusses are calculated according to the Eurocode 9 (DIN-EN 1999) standard. Eurocodes are standards based on Load and Resistance Factor Design (LRFD).

The structural data provided before January 2016 was based on the German DIN 4113 standard. As this standard had a different safety principle, the structural values cannot be compared.

NOTICE

TÜV certificates issued after February 2015 are all based on Eurocode 9.



			Geometry										
Code	Туре	Material	Dimensions centre to centre		Main chord	diagonals	Cross-section complete truss				Average dead weight		
			Height	Width	[mm]	[mm]	А	ly	Iz	Ιτ	g		
			[mm]	[mm]			[cm ²]	[cm ⁴]	[cm ⁴]	[cm ⁴]	[kg/m]		
S66R	Rectangular	6082 T6	610	420	50x4	30x3	23.12	18335.3	3300	950	17		
S66V	Square	6082 T6	610	712	50x4	30x3	23.12	18335.3	3200	1500	17		

Table 1: Geometry

		Design val	ues of resis	stances	
Code	Main chord				
	N,rd	M _{y,rd}	M _{z,rd}	V _{z,rd}	Vy, _{rd}
	[kN]	[kNm]	[kNm]	[kN]	[kN]
S66R	68.44	83.50	-	46.23	-
S66V	68.44	83.50	-	46.23	-

Table 2: Design values of resistances

4 Transport, handling and storage


See PROLYTE Trusses User Manual, Part 1: General instructions.

5 Identification


See PROLYTE Trusses User Manual, Part 1: General instructions.




6 Technical specifications

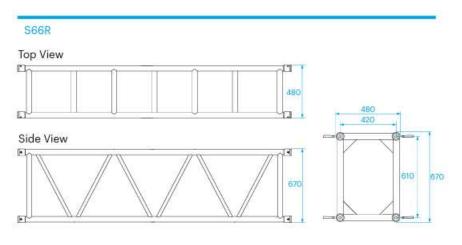

S66V

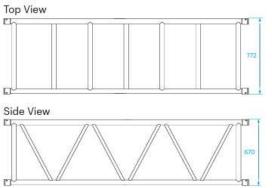

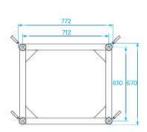

Types	Rectangular (R), Square (V)	Rectangular (R), Square (V)						
Alloy	EN AW 6082 T6							
Main Chords	50 x 4 mm							
Diagonal Members	30 x 3 mm							
Coupling System	CCS7							

Metres	Feet	Code*
0.50/1.00 m in 5 mm steps	0.82'/3.28', in 0.2' steps	
1,00	3.28	S66+-L100
1,50	4.92	S66•-L150
1,74*	5.71	S66L174
2,00	6.56	S66L200
2,50*	8.20	S66+-L250
3,00	9.84	S66L300
3,26*	10.69	S66L326
4,00	13.12	S66L400

*on • indicate R for Rectangular, V for Square truss.



7 Load capacity

In addition to the information and instructions provided in *PROLYTE Trusses User Manual, Part 1: General instructions*, the truss loads shall never exceed the values stated in the load tables below.

						- A	~			A.	A			A.	A.	
							MAXIMUM ALLOWABLE POINT LOADS									
Uniformly Distributed Load						Centre Point Load				Single Load Third Points Single Load Fourth Points Load per Point Load per Point		Single Load Fifth Points Load per Point				
SF	PAN	UDL		DEFLECTION		CPL		DEFLECTION		TPL		QPL		FPL		SPAN
m	ft			mm	inch			mm	inch					kgs	lbs	total weight
6	19,7	1012,0	681,0	16	0,6	2286,7	5046,7	13	0,5	1441,1	3180,5	1145,5	2528,1	952,8	2102,9	102,0
7	23,0	865,3	582,2	22	0,9	2065,1	4557,7	18	0,7	1321,4	2916,4	1064,9	2350,3	893,9	1972,9	119,0
8	26,2	680,5	457,9	29	1,1	1880,3	4149,7	23	0,9	1218,8	2689,8	993,7	2193,2	824,3	1819,2	136,0
9	29,5	534,5	359,6	37	1,4	1723,4	3803,6	29	1,2	1129,6	2493,0	930,3	2053,2	752,0	1659,6	153,0
10	32,8	430,0	289,3	45	1,8	1588,4	3505,6	36	1,4	1051,3	2320,2	873,3	1927,4	690,2	1523,3	170,0
11	36,1	352,7	237,3	55	2,2	1470,8	3245,9	44	1,7	981,9	2167,0	821,7	1813,6	636,9	1405,5	187,0
12	39,4	294,0	197,8	65	2,6	1367,1	3017,3	52	2,0	919,8	2030,1	770,2	1699,7	590,2	1302,5	204,0
13	42,6	248,2	167,0	76	3,0	1275,0	2813,9	61	2,4	863,9	1906,7	712,2	1571,8	548,9	1211,4	221,0
14	45,9	211,9	142,6	89	3,5	1192,4	2631,7	71	2,8	813,2	1794,8	661,0	1458,9	512,1	1130,3	238,0
15	49,2	182,6	122,9	102	4,0	1117,8	2467,1	81	3,2	767,0	1692,7	615,5	1358,4	479,1	1057,3	255,0
16	52,5	158,7	106,8	116	4,6	1050,0	2317,4	93	3,6	724,5	1599,0	574,6	1268,2	449,2	991,3	272,0
17	55,8	138,8	93,4	131	5,1	988,0	2180,6	104	4,1	685,4	1512,6	537,7	1186,7	421,9	931,1	289,0
18	59,0	122,1	82,2	146	5,8	931,0	2054,7	117	4,6	649,1	1432,5	504,1	1112,5	396,9	876,0	306,0
19	62,3	108,1	72,7	163	6,4	878,3	1938,3	131	5,1	615,3	1357,9	473,3	1044,6	374,0	825,3	323,0
20	65,6	96,0	64,6	181	7,1	829,3	1830,3	145	5,7	583,7	1288,2	445,0	982,1	352,7	778,4	340,0
21	68,9	85,7	57,7	199	7,8	783,7	1729,6	159	6,3	554,1	1222,9	418,8	924,4	332,9	734,7	357,0
22	72,2	76,7	51,6	219	8,6	741,0	1635,3	175	6,9	526,2	1161,3	394,5	870,7	314,5	694,0	374,0
23	75,4	68,9	46,3	239	9,4	700,8	1546,7	191	7,5	499,9	1103,2	371,9	820,7	297,2	655,8	391,0
24	78,7	62,0	41,7	260	10,2	663,0	1463,3	208	8,2	474,9	1048.1	350,6	773,8	280,9	620,0	408,0

1 inch = 25,4 mm | 1m = 3.28 ft | 1 lbs = 0,453 kg

- · Tüv certification only valid for loading table above.
- Loading figures are only valid for static loads.
- · Loading figures are only valid for single spans with supports at both ends.
- All static systems, other than single spans, need an individual structural calculation. Please contact a structural engineer
 or Prolyte for assistance.
- Loading figures are calculated according to and in full compliance with European standards (Eurocode).
- The self-weight of the trusses is already taken into account.
- · Loading figures are only valid for the cross sectional orientation of the truss as shown by the icon in the loading table.
- The interaction between bending moment and shear force at the connection point is already taken into account.
- · Truss spans can be assembled from different truss lengths.
- · Read the manual before assembling, using and loading the truss.



8 Approved accessories

For a complete overview of approved accessories, see our brochures or <u>www.prolyte.com</u>.

By using excessive force when tightening accessories such as lamp hooks or cell clamps, you may cause damage to the truss chords.

Pay special attention when using lamp hooks or cell clamps. Their inside radius may not meet the tube they need to be attached to. This can lead to severe damage.

NOTICE

You should never allow accessories to damage other products.

9 Coatings and surface treatments

See PROLYTE Trusses User Manual, Part 1: General instructions.

10 Slinging methods

See PROLYTE Trusses User Manual, Part 1: General instructions.

11 Assembly and disassembly

See PROLYTE Trusses User Manual, Part 1: General instructions.

12 Maintenance

See PROLYTE Trusses User Manual, Part 1: General instructions.

13 Inspection

See PROLYTE Trusses User Manual, Part 1: General instructions.

14 Discard criteria

See PROLYTE Trusses User Manual, Part 1: General instructions.

15 Warranty

See PROLYTE Trusses User Manual, Part 1: General instructions.

16 Certificates

The TÜV certificates for this product are available at:

https://www.prolyte.com/support/certificates/certificates-download



Contact details: PROLYTE BV. Industriepark 9 9351PC Leek The Netherlands T +31 594 85 15 15 sales@prolyte.com



www.prolyte.com

DN00173 Issue 1

© 2023 Prolyte BV.